

# ACCU ELECTRIC MOTORS INC

USA: (888) 932-9183

CANADA: (905) 829-2505

- ✓ Over 100 years cumulative experience
- ✓ 24 hour rush turnaround / technical support service
- ✓ Established in 1993



The leading independent repairer of servo motors and drives in North America.

Visit us on the web:

[www.servo-repair.com](http://www.servo-repair.com)

[www.servorepair.ca](http://www.servorepair.ca)

[www.ferrocontrol.com](http://www.ferrocontrol.com)  
[www.sandvikrepair.com](http://www.sandvikrepair.com)  
[www.accuelectric.com](http://www.accuelectric.com)

**Scroll down to view your document!**

For 24/7 repair services :

USA: 1 (888) 932 - 9183

Canada: 1 (905) 829 -2505

Emergency After hours: 1 (416) 624 0386

Servicing USA and Canada

# I N D E X

---

## A

ABSOLUTE POSITION COUNTER 21  
AC POWER 8, 12  
ACCURACY & REPEATABILITY 127  
AMBIENT TEMPERATURE 16  
APPLICATION CONSIDERATIONS 27  
ATMOSPHERIC CONTAMINATION 16

## B

BAUD RATE 13  
BAUD RATES 14  
BENCH TEST 6  
BRANCHING 30  
BRANCHING WITH IF 31

## C

CALCULATING MOVE TIMES 28  
CCW LIMIT TEST 20  
CHECK-OUT PROCEDURE 6  
COMMAND  
  ABSOLUTE POSITION REPORT 91  
  ACCELERATION LIMIT 83  
  AMPLIFIER OFF 87  
  AMPLIFIER ON 88  
  ATTRIBUTES 53  
  BACKSPACE 76  
  BACKUP TO HOME SWITCH 89  
  BEGIN LOOP 82  
  BUFFER SPACE 60, 61  
  BUFFER STATUS 55  
  BUFFERED CONFIGURE CURRENT AVERAGE 56  
  BUFFERED CONFIGURE CURRENT PEAK 56  
  BUFFERED CONFIGURE DEAD BAND 57  
  BUFFERED CONFIGURE DERIVATIVE GAIN 57  
  BUFFERED CONFIGURE DERIVATIVE MAXIMUM 57  
  BUFFERED CONFIGURE INTEGRAL GAIN 58  
  BUFFERED CONFIGURE INTEGRAL MAXIMUM 58  
  BUFFERED CONFIGURE MAXIMUM INTEGRAL SUM LIMIT 58  
  BUFFERED CONFIGURE POSITION ERROR 59  
  BUFFERED CONFIGURE POSITION GAIN 59  
  BUFFERED CONFIGURE POSITIONAL MAXIMUM 59  
  BUFFERED CONFIGURE VELOCITY GAIN 60  
  BUFFERED CONFIGURE VELOCITY MAXIMUM 60  
  CARRIAGE RETURN 67  
  CHARACTERISTICS 52  
  CLEAR/SAVE COMMAND BUFFER ON LIMIT 103  
  CLEAR/SAVE COMMAND BUFFER ON STOP 103  
  COMPARE USER FLAG 77  
  CONFIGURE CURRENT AVERAGE 61  
  CONFIGURE DEAD BAND 62  
  CONFIGURE DIFFERENTIAL GAIN 62  
  CONFIGURE DIFFERENTIAL MAXIMUM 62  
  CONFIGURE GAIN SWITCHING 63  
  CONFIGURE IN-POSITION TIME 64  
  CONFIGURE INTEGRAL GAIN 63  
  CONFIGURE INTEGRAL MAXIMUM 64  
  CONFIGURE INTEGRAL SUM MAXIMUM 63  
  CONFIGURE MAXIMUM CURRENT PEAK 62  
  CONFIGURE MOTOR 65  
  CONFIGURE MOTOR RESOLUTION 64  
  CONFIGURE POSITION ERROR 66  
  CONFIGURE PROPORTIONAL GAIN 66  
  CONFIGURE PROPORTIONAL MAXIMUM 66  
  CONFIGURE PUSHBUTTON 65  
  CONFIGURE VELOCITY GAIN 67

  CONFIGURE VELOCITY MAXIMUM 67  
  CONTINUE 61  
  DEFAULT 53  
  DEFINE ACTIVE STATE OF HOME SWITCH 90  
  DEFINE RESOLVER HOME POSITION 76  
  DESCRIPTION 54  
  DISABLE COMMUNICATIONS INTERFACE 72  
  DISPLAY CURRENT AVERAGE 68  
  DISPLAY CURRENT INSTANTANEOUS 68  
  DISPLAY CURRENT PEAK 69  
  DISPLAY FLAGS FOR SERVO PARAMETERS 69  
  DISPLAY INDEXER FLAGS 69  
  DISPLAY POSITION ACTUAL 70  
  DISPLAY TUNING PARAMETERS 71  
  DISPLAY/REPORT ACTUAL VELOCITY 71  
  DISPLAY/REPORT POSITION ERROR 70  
  DISPLAY/REPORT POSITION RESOLVER 70  
  DISPLAY/REPORT POSITION SET POINT 71  
  DISPLAY/REPORT VELOCITY SETPOINT 71  
  DISTANCE 68  
  ELSE 72  
  ENABLE COMMUNICATIONS INTERFACE 72  
  ENABLE DIGITAL TORQUE FILTER 73  
  ENABLE REGISTRATION 105  
  ENABLE/DISABLE CONTINUOUS SCAN MODE 104  
  ENABLE/DISABLE INTERACTIVE MODE 104  
  END OF IFXX COMMAND 86  
  END OF LOOP 86  
  ERASE SEQUENCE 114  
  EXAMPLE 54  
  FINAL HOMING DIRECTION 90  
  FUNCTION SETUP REPORT 88  
  GO 73  
  GO DEFINED 74  
  GO HOME 75  
  GO HOME ACCELERATION 74  
  GO HOME FINAL VELOCITY 76  
  GO HOME STATUS REQUEST 96  
  GO HOME TO RESOLVER POSITION 89  
  GOTO SEQUENCE 114  
  HEXADECIMAL SIGNED POSITION REPORT 112  
  HEXADECIMAL UNSIGNED POSITION REPORT 111  
  IDENTIFIER 52  
  IF ERROR CONDITION 77  
  IF INPUT 78  
  IF TRIGGER 78  
  IMMEDIATE OUTPUT 80  
  INPUT MODE CONFIGURE 79  
  INPUT STATUS 81  
  JOG ACCELERATION 81  
  JOG ENABLE 90  
  JOG VELOCITY 81  
  KILL MOTION 82  
  LIMIT DISABLE 83  
  LIMIT SWITCH STATUS REPORT 93  
  LINE FEED 84  
  LOOP, PAUSE, SHUTDOWN AND TRIGGER STATUS 94  
  MODE CONTINUOUS 84  
  MODE NORMAL 85  
  MODE POSITION ABSOLUTE 85  
  MODE POSITION INCREMENTAL 85  
  MOVE DEFINITION 75  
  NAME 52  
  OUTPUT 87  
  OUTPUT MODE 87  
  PAUSE 91

- PAUSE & WAIT FOR CONTINUE 109
- QUOTE 54
- RANGE 53
- REFERENCE EDGE OF HOME SWITCH 90
- REPORT INDEXER STATUS 93
- REPORT SERVO ERRORS 98
- RESET 119
- RESUME EXECUTION ENABLE 105
- RETURN DRIVE PARAMETERS TO FACTORY SETTING 96
- RETURN INDEXER TO FACTORY SETTINGS 96
- REVISION LEVEL 98
- RS-232C ECHO CONTROL 102
- RUN A SEQUENCE 115
- SAVE SEQUENCE SCAN MODE ON STOP 91
- SAVE SET-UP AND SEQUENCES 99, 106
- SCAN 101
- SELF TUNE 108
- SEQUENCE CHECKSUM REPORT 112
- SEQUENCE DEFINITION 113
- SEQUENCE DIRECTORY REPORT 113
- SEQUENCE RUN STATUS 116
- SEQUENCE RUN WITH PAUSE 116
- SEQUENCE STATUS 117
- SEQUENCE STATUS DEFINITION REPORT 116
- SET ABSOLUTE POSITION TO ZERO 92
- SET ACCELERATION 55
- SET DIRECTION 76
- SET FAULT OR KILL SEQUENCE 114
- SET GAIN TYPE 74
- SET POSITION ABSOLUTE 101
- SET RATE MULTIPLIER VELOCITY 97
- SET REGISTRATION PARAMETERS 95
- SET SEQUENCE INTERRUPTED-RUN MODE 115
- SET SEQUENCE SINGLE-STEP MODE 117
- SET SOFT LIMITS 100
- SET TRACE MODE 118
- SET USER FLAG 99
- SET VELOCITY PROFILING MODE 92
- SET-UP REPORT 101
- SHOW NUMBER ON LED DISPLAY 84
- SHUTDOWN THE AMPLIFIER 106
- SIGNED BINARY POSITION REPORT 110
- SINGLE STEP 54
- SOFT LIMIT DISABLE 100
- STATUS OF SEQUENCE EXECUTION 97
- STOP LOOP 119
- STOP MOTION 99, 106
- SYNTAX 52
- TERMINATE (END) SEQUENCE 118
- TIME DELAY 107
- TRIG1 CLEARS PAUSE 102
- TRIG1 DEDICATED AS SEQUENCE STROBE 103
- TRIG1 DEDICATED STOP LINE 102
- TRIGGER INPUT STATUS 108
- TYPE 52
- UNITS 52
- UPLOAD SEQUENCE 119
- VELOCITY 109
- VERSION 52
- WAIT FOR TRIGGER 107
- COMMANDS
  - BUFFERED 25
  - ISSUING 8
- COMMUNICATION PARAMETERS 7
- CONNECTION
  - DAISY CHAIN 14
  - MOTOR 13
- CONNECTION OVERVIEW 8
- CONNECTIONS
  - LINE POWER 12
  - POWER 7
  - RS-232 7
- CONNECTOR
  - MS-TYPE 13
  - RESOLVER 13
  - RS-232C 13
  - SCREW TERMINAL 12
- CONTINUOUS MODE 29
- CONTINUOUS MODE MOVES 21
- COUPLING 17
  - ANGULAR MISALIGNMENT 17
  - DOUBLE-FLEX 17
  - END FLOAT 17
  - PARALLEL MISALIGNMENT 17
  - RIGID 18
  - SINGLE-FLEX 17

CW LIMIT TEST 20

## D

- DEBUGGING YOUR MOTION PROGRAM 132
- DELIMITER 8
- DEVICE ADDRESS 14
- DFS SERVO STATUS 132
- DFX COMMAND REPORT BACK 132
- DISCRETE CONTROL CONNECTIONS 124
- DISCRETE INPUT/OUTPUT CONNECTIONS 125
- DRIVE DIMENSIONS
  - CPH & CPHX 126
  - CPL, CPLX 126
- DRIVE/MOTOR CONFIGURATION 6

## E

- EEPROM 35
- ELECTRICAL CONNECTIONS 8
- ENCODER FEEDBACK 15
- ENCODERS 15
- ENVIRONMENTAL SPECIFICATIONS 11
- ERRORS
  - DIAGNOSTIC CODES 130
- ESTABLISH COMMUNICATIONS 7
- EVENT COMPLETION SIGNALS 34

## F

- FACTORY DEFAULT 19
- FACTORY DEFAULTS 9
- FAULT OUTPUT 15
- FAULTS 22
- FINAL SYSTEM CONFIGURATION 22
- FREQUENCY RESPONSE 49
- FRONT PANEL
  - LOGO 14
- FRONT PANEL DESCRIPTION 6
- FUNCTION SETUP REPORTS 133

## G

- GAIN
  - DERIVATIVE 44
  - INTEGRAL 44
  - PROPORTIONAL 44
  - VELOCITY 44
- GENERAL STATUS 134
- GROUNDING
  - EMI 12

## H

- HIGH POWER CONNECTIONS 12
- HOME INPUT SWITCH 21
- HOMING AND JOG STATUS 133
- HOMING THE MOTOR 21

## I

- I/O SCHEMATICS 123
- I/O SPECIFICATIONS 124
- IMMEDIATE COMMANDS 35
- INCREMENTAL VS. ABSOLUTE POSITIONING 28
- INPUT OUTPUT SPECIFICATIONS 125
- INPUT POWER 124
- INPUTS
  - COMMAND 23
  - HOME 23
  - LIMIT 15
  - LIMIT SWITCHES 19
  - PROGRAMMABLE 22
  - SEQUENCE 24
- INPUTS & OUTPUTS 22
- INSTABILITY 45
- INSTALLATION
  - VERIFYING 19
- INTERACTIVE MODE 19
- INTERACTIVE PROGRAMMING 29
- ISOLATION TRANSFORMER 13

## L

- LIMITS
  - END-OF-TRAVEL 15, 21
- LIMITS, HOMING, TRIGGERS & SEQUENCE SELECTION 130
- LINE FILTERING 13
- LOOPING 30
- LOOPS
  - NESTING 30

## M

- MAXIMUM AVERAGE CURRENT 56
- MAXIMUM PEAK CURRENT 56
- MODES
  - TRACE 133
- MOTOR CONFIGURATION 9
- MOTOR CONNECTIONS 124
- MOTOR DIMENSIONS 127
- MOTOR FAILS TO RUN AT HIGH SPEEDS 130
- MOTOR IS JERKY OR WEAK 130
- MOTOR RESOLUTION 18
- MOTOR SPECIFICATIONS 127
- MOTORS
  - CPH106-220 5
  - CPH83-150 5
  - CPHX83-150 5
  - CPLX57-120 5
- MOUNTING
  - DRIVE 16
  - HORIZONTAL CLEARANCE 16
  - PANEL 18
  - SYSTEM 16
  - VERTICAL CLEARANCE 16

## N

- NATIONAL ELECTRICAL CODE 12

## O

- OUTPUTS
  - PROGRAMMABLE 22, 23

## P

- PEAK CURRENT LIMIT 56
- PLC OPERATION 38
- POSITION SENSOR 124
- POSITIONING MODES 28
- POWER CABLES 9
- POWER-UP SEQUENCE EXECUTION 37
- PRESET MODE) 28
- PRODUCT FEATURES 2
- PRODUCT LABEL 6
- PROGRAMMABLE DELAYS 29
- PROGRAMMABLE OUTPUTS (POBS) 33
- PROPER GROUNDING 12
- PUSHBUTTON
  - TUNING 13
- PUSHBUTTONS
  - FRONT PANEL 13

## R

- REGISTRATION AND .I.SYNCHRONIZATION 40
- REMOTE JOGGING 35
- REMOTE SEQUENCE EXECUTION 37
- REMOTE SEQUENCING (BCD INPUTS) 130
- REPEATABILITY 27
- RS-232C 131
- RS-232C COMMUNICATION 39
- RS-232C CONNECTIONS 124
- RS-232C TERMINAL 9

## S

- SELF TUNING PROCEDURE 48
- SEQUENCE
  - 40 36
- SEQUENCE DIRECTORY 133
- SEQUENCE SELECTION METHODS 36
- SEQUENCE STATUS 133
- SETTING DRIVE CURRENT 9
- SHIP KIT CONTENTS 5
- SINGLE STEPPING 133
- SPECIFICATIONS
  - PHYSICAL 127
- STANDALONE OPERATION 37
- SUBROUTINES 32
- SWITCH-MODE AMPLIFIERS 13
- SYSTEM CONFIGURATION 11
- SYSTEM SPECIFICATIONS 127

## T

- TERMINAL EMULATOR 9
- TESTING LIMIT SWITCH OPERATION 20
- TORQUE/SPEED CURVES 128
- TRANSFORMER 8, 12
  - STEP DOWN 13

- STEP-DOWN 7
- TRIGGER INPUTS 24
- TROUBLESHOOTING 129
- TRUNCATION ERRORS 19
- TUNING
  - RS-232C 45
- TUNING PROBLEMS 48
- TUNING THEORY 42

## V

- VIBRATION 49

## W

- WIRING
  - VERIFICATION 24
- WIRING GUIDELINES 12