

ACCU ELECTRIC MOTORS INC

USA: (888) 932-9183

CANADA: (905) 829-2505

- ✓ Over 100 years cumulative experience
- ✓ 24 hour rush turnaround / technical support service
- ✓ Established in 1993



The leading independent repairer of servo motors and drives in North America.

Visit us on the web:

www.servo-repair.com

www.servorepair.ca

www.ferrocontrol.com
www.sandvikrepair.com
www.accuelectric.com

Scroll down to view your document!

For 24/7 repair services :

USA: 1 (888) 932 - 9183

Canada: 1 (905) 829 -2505

Emergency After hours: 1 (416) 624 0386

Servicing USA and Canada

I N D E X

A

ABSOLUTE POSITION COUNTER 21
AC POWER 8, 12
ACCURACY & REPEATABILITY 127
AMBIENT TEMPERATURE 16
APPLICATION CONSIDERATIONS 27
ATMOSPHERIC CONTAMINATION 16

B

BAUD RATE 13
BAUD RATES 14
BENCH TEST 6
BRANCHING 30
BRANCHING WITH IF 31

C

CALCULATING MOVE TIMES 28
CCW LIMIT TEST 20
CHECK-OUT PROCEDURE 6
COMMAND
 ABSOLUTE POSITION REPORT 91
 ACCELERATION LIMIT 83
 AMPLIFIER OFF 87
 AMPLIFIER ON 88
 ATTRIBUTES 53
 BACKSPACE 76
 BACKUP TO HOME SWITCH 89
 BEGIN LOOP 82
 BUFFER SPACE 60, 61
 BUFFER STATUS 55
 BUFFERED CONFIGURE CURRENT AVERAGE 56
 BUFFERED CONFIGURE CURRENT PEAK 56
 BUFFERED CONFIGURE DEAD BAND 57
 BUFFERED CONFIGURE DERIVATIVE GAIN 57
 BUFFERED CONFIGURE DERIVATIVE MAXIMUM 57
 BUFFERED CONFIGURE INTEGRAL GAIN 58
 BUFFERED CONFIGURE INTEGRAL MAXIMUM 58
 BUFFERED CONFIGURE MAXIMUM INTEGRAL SUM LIMIT 58
 BUFFERED CONFIGURE POSITION ERROR 59
 BUFFERED CONFIGURE POSITION GAIN 59
 BUFFERED CONFIGURE POSITIONAL MAXIMUM 59
 BUFFERED CONFIGURE VELOCITY GAIN 60
 BUFFERED CONFIGURE VELOCITY MAXIMUM 60
 CARRIAGE RETURN 67
 CHARACTERISTICS 52
 CLEAR/SAVE COMMAND BUFFER ON LIMIT 103
 CLEAR/SAVE COMMAND BUFFER ON STOP 103
 COMPARE USER FLAG 77
 CONFIGURE CURRENT AVERAGE 61
 CONFIGURE DEAD BAND 62
 CONFIGURE DIFFERENTIAL GAIN 62
 CONFIGURE DIFFERENTIAL MAXIMUM 62
 CONFIGURE GAIN SWITCHING 63
 CONFIGURE IN-POSITION TIME 64
 CONFIGURE INTEGRAL GAIN 63
 CONFIGURE INTEGRAL MAXIMUM 64
 CONFIGURE INTEGRAL SUM MAXIMUM 63
 CONFIGURE MAXIMUM CURRENT PEAK 62
 CONFIGURE MOTOR 65
 CONFIGURE MOTOR RESOLUTION 64
 CONFIGURE POSITION ERROR 66
 CONFIGURE PROPORTIONAL GAIN 66
 CONFIGURE PROPORTIONAL MAXIMUM 66
 CONFIGURE PUSHBUTTON 65
 CONFIGURE VELOCITY GAIN 67

 CONFIGURE VELOCITY MAXIMUM 67
 CONTINUE 61
 DEFAULT 53
 DEFINE ACTIVE STATE OF HOME SWITCH 90
 DEFINE RESOLVER HOME POSITION 76
 DESCRIPTION 54
 DISABLE COMMUNICATIONS INTERFACE 72
 DISPLAY CURRENT AVERAGE 68
 DISPLAY CURRENT INSTANTANEOUS 68
 DISPLAY CURRENT PEAK 69
 DISPLAY FLAGS FOR SERVO PARAMETERS 69
 DISPLAY INDEXER FLAGS 69
 DISPLAY POSITION ACTUAL 70
 DISPLAY TUNING PARAMETERS 71
 DISPLAY/REPORT ACTUAL VELOCITY 71
 DISPLAY/REPORT POSITION ERROR 70
 DISPLAY/REPORT POSITION RESOLVER 70
 DISPLAY/REPORT POSITION SET POINT 71
 DISPLAY/REPORT VELOCITY SETPOINT 71
 DISTANCE 68
 ELSE 72
 ENABLE COMMUNICATIONS INTERFACE 72
 ENABLE DIGITAL TORQUE FILTER 73
 ENABLE REGISTRATION 105
 ENABLE/DISABLE CONTINUOUS SCAN MODE 104
 ENABLE/DISABLE INTERACTIVE MODE 104
 END OF IFXX COMMAND 86
 END OF LOOP 86
 ERASE SEQUENCE 114
 EXAMPLE 54
 FINAL HOMING DIRECTION 90
 FUNCTION SETUP REPORT 88
 GO 73
 GO DEFINED 74
 GO HOME 75
 GO HOME ACCELERATION 74
 GO HOME FINAL VELOCITY 76
 GO HOME STATUS REQUEST 96
 GO HOME TO RESOLVER POSITION 89
 GOTO SEQUENCE 114
 HEXADECIMAL SIGNED POSITION REPORT 112
 HEXADECIMAL UNSIGNED POSITION REPORT 111
 IDENTIFIER 52
 IF ERROR CONDITION 77
 IF INPUT 78
 IF TRIGGER 78
 IMMEDIATE OUTPUT 80
 INPUT MODE CONFIGURE 79
 INPUT STATUS 81
 JOG ACCELERATION 81
 JOG ENABLE 90
 JOG VELOCITY 81
 KILL MOTION 82
 LIMIT DISABLE 83
 LIMIT SWITCH STATUS REPORT 93
 LINE FEED 84
 LOOP, PAUSE, SHUTDOWN AND TRIGGER STATUS 94
 MODE CONTINUOUS 84
 MODE NORMAL 85
 MODE POSITION ABSOLUTE 85
 MODE POSITION INCREMENTAL 85
 MOVE DEFINITION 75
 NAME 52
 OUTPUT 87
 OUTPUT MODE 87
 PAUSE 91

- PAUSE & WAIT FOR CONTINUE 109
- QUOTE 54
- RANGE 53
- REFERENCE EDGE OF HOME SWITCH 90
- REPORT INDEXER STATUS 93
- REPORT SERVO ERRORS 98
- RESET 119
- RESUME EXECUTION ENABLE 105
- RETURN DRIVE PARAMETERS TO FACTORY SETTING 96
- RETURN INDEXER TO FACTORY SETTINGS 96
- REVISION LEVEL 98
- RS-232C ECHO CONTROL 102
- RUN A SEQUENCE 115
- SAVE SEQUENCE SCAN MODE ON STOP 91
- SAVE SET-UP AND SEQUENCES 99, 106
- SCAN 101
- SELF TUNE 108
- SEQUENCE CHECKSUM REPORT 112
- SEQUENCE DEFINITION 113
- SEQUENCE DIRECTORY REPORT 113
- SEQUENCE RUN STATUS 116
- SEQUENCE RUN WITH PAUSE 116
- SEQUENCE STATUS 117
- SEQUENCE STATUS DEFINITION REPORT 116
- SET ABSOLUTE POSITION TO ZERO 92
- SET ACCELERATION 55
- SET DIRECTION 76
- SET FAULT OR KILL SEQUENCE 114
- SET GAIN TYPE 74
- SET POSITION ABSOLUTE 101
- SET RATE MULTIPLIER VELOCITY 97
- SET REGISTRATION PARAMETERS 95
- SET SEQUENCE INTERRUPTED-RUN MODE 115
- SET SEQUENCE SINGLE-STEP MODE 117
- SET SOFT LIMITS 100
- SET TRACE MODE 118
- SET USER FLAG 99
- SET VELOCITY PROFILING MODE 92
- SET-UP REPORT 101
- SHOW NUMBER ON LED DISPLAY 84
- SHUTDOWN THE AMPLIFIER 106
- SIGNED BINARY POSITION REPORT 110
- SINGLE STEP 54
- SOFT LIMIT DISABLE 100
- STATUS OF SEQUENCE EXECUTION 97
- STOP LOOP 119
- STOP MOTION 99, 106
- SYNTAX 52
- TERMINATE (END) SEQUENCE 118
- TIME DELAY 107
- TRIG1 CLEARS PAUSE 102
- TRIG1 DEDICATED AS SEQUENCE STROBE 103
- TRIG1 DEDICATED STOP LINE 102
- TRIGGER INPUT STATUS 108
- TYPE 52
- UNITS 52
- UPLOAD SEQUENCE 119
- VELOCITY 109
- VERSION 52
- WAIT FOR TRIGGER 107
- COMMANDS
 - BUFFERED 25
 - ISSUING 8
- COMMUNICATION PARAMETERS 7
- CONNECTION
 - DAISY CHAIN 14
 - MOTOR 13
- CONNECTION OVERVIEW 8
- CONNECTIONS
 - LINE POWER 12
 - POWER 7
 - RS-232 7
- CONNECTOR
 - MS-TYPE 13
 - RESOLVER 13
 - RS-232C 13
 - SCREW TERMINAL 12
- CONTINUOUS MODE 29
- CONTINUOUS MODE MOVES 21
- COUPLING 17
 - ANGULAR MISALIGNMENT 17
 - DOUBLE-FLEX 17
 - END FLOAT 17
 - PARALLEL MISALIGNMENT 17
 - RIGID 18
 - SINGLE-FLEX 17

CW LIMIT TEST 20

D

- DEBUGGING YOUR MOTION PROGRAM 132
- DELIMITER 8
- DEVICE ADDRESS 14
- DFS SERVO STATUS 132
- DFX COMMAND REPORT BACK 132
- DISCRETE CONTROL CONNECTIONS 124
- DISCRETE INPUT/OUTPUT CONNECTIONS 125
- DRIVE DIMENSIONS
 - CPH & CPHX 126
 - CPL, CPLX 126
- DRIVE/MOTOR CONFIGURATION 6

E

- EEPROM 35
- ELECTRICAL CONNECTIONS 8
- ENCODER FEEDBACK 15
- ENCODERS 15
- ENVIRONMENTAL SPECIFICATIONS 11
- ERRORS
 - DIAGNOSTIC CODES 130
- ESTABLISH COMMUNICATIONS 7
- EVENT COMPLETION SIGNALS 34

F

- FACTORY DEFAULT 19
- FACTORY DEFAULTS 9
- FAULT OUTPUT 15
- FAULTS 22
- FINAL SYSTEM CONFIGURATION 22
- FREQUENCY RESPONSE 49
- FRONT PANEL
 - LOGO 14
- FRONT PANEL DESCRIPTION 6
- FUNCTION SETUP REPORTS 133

G

- GAIN
 - DERIVATIVE 44
 - INTEGRAL 44
 - PROPORTIONAL 44
 - VELOCITY 44
- GENERAL STATUS 134
- GROUNDING
 - EMI 12

H

- HIGH POWER CONNECTIONS 12
- HOME INPUT SWITCH 21
- HOMING AND JOG STATUS 133
- HOMING THE MOTOR 21

I

- I/O SCHEMATICS 123
- I/O SPECIFICATIONS 124
- IMMEDIATE COMMANDS 35
- INCREMENTAL VS. ABSOLUTE POSITIONING 28
- INPUT OUTPUT SPECIFICATIONS 125
- INPUT POWER 124
- INPUTS
 - COMMAND 23
 - HOME 23
 - LIMIT 15
 - LIMIT SWITCHES 19
 - PROGRAMMABLE 22
 - SEQUENCE 24
- INPUTS & OUTPUTS 22
- INSTABILITY 45
- INSTALLATION
 - VERIFYING 19
- INTERACTIVE MODE 19
- INTERACTIVE PROGRAMMING 29
- ISOLATION TRANSFORMER 13

L

- LIMITS
 - END-OF-TRAVEL 15, 21
- LIMITS, HOMING, TRIGGERS & SEQUENCE SELECTION 130
- LINE FILTERING 13
- LOOPING 30
- LOOPS
 - NESTING 30

M

- MAXIMUM AVERAGE CURRENT 56
- MAXIMUM PEAK CURRENT 56
- MODES
 - TRACE 133
- MOTOR CONFIGURATION 9
- MOTOR CONNECTIONS 124
- MOTOR DIMENSIONS 127
- MOTOR FAILS TO RUN AT HIGH SPEEDS 130
- MOTOR IS JERKY OR WEAK 130
- MOTOR RESOLUTION 18
- MOTOR SPECIFICATIONS 127
- MOTORS
 - CPH106-220 5
 - CPH83-150 5
 - CPHX83-150 5
 - CPLX57-120 5
- MOUNTING
 - DRIVE 16
 - HORIZONTAL CLEARANCE 16
 - PANEL 18
 - SYSTEM 16
 - VERTICAL CLEARANCE 16

N

- NATIONAL ELECTRICAL CODE 12

O

- OUTPUTS
 - PROGRAMMABLE 22, 23

P

- PEAK CURRENT LIMIT 56
- PLC OPERATION 38
- POSITION SENSOR 124
- POSITIONING MODES 28
- POWER CABLES 9
- POWER-UP SEQUENCE EXECUTION 37
- PRESET MODE) 28
- PRODUCT FEATURES 2
- PRODUCT LABEL 6
- PROGRAMMABLE DELAYS 29
- PROGRAMMABLE OUTPUTS (POBS) 33
- PROPER GROUNDING 12
- PUSHBUTTON
 - TUNING 13
- PUSHBUTTONS
 - FRONT PANEL 13

R

- REGISTRATION AND .I.SYNCHRONIZATION 40
- REMOTE JOGGING 35
- REMOTE SEQUENCE EXECUTION 37
- REMOTE SEQUENCING (BCD INPUTS) 130
- REPEATABILITY 27
- RS-232C 131
- RS-232C COMMUNICATION 39
- RS-232C CONNECTIONS 124
- RS-232C TERMINAL 9

S

- SELF TUNING PROCEDURE 48
- SEQUENCE
 - 40 36
- SEQUENCE DIRECTORY 133
- SEQUENCE SELECTION METHODS 36
- SEQUENCE STATUS 133
- SETTING DRIVE CURRENT 9
- SHIP KIT CONTENTS 5
- SINGLE STEPPING 133
- SPECIFICATIONS
 - PHYSICAL 127
- STANDALONE OPERATION 37
- SUBROUTINES 32
- SWITCH-MODE AMPLIFIERS 13
- SYSTEM CONFIGURATION 11
- SYSTEM SPECIFICATIONS 127

T

- TERMINAL EMULATOR 9
- TESTING LIMIT SWITCH OPERATION 20
- TORQUE/SPEED CURVES 128
- TRANSFORMER 8, 12
 - STEP DOWN 13

- STEP-DOWN 7
- TRIGGER INPUTS 24
- TROUBLESHOOTING 129
- TRUNCATION ERRORS 19
- TUNING
 - RS-232C 45
- TUNING PROBLEMS 48
- TUNING THEORY 42

V

- VIBRATION 49

W

- WIRING
 - VERIFICATION 24
- WIRING GUIDELINES 12